ARISTON

Mini Tank water heater
Electric undersink
Water heaters

GL 2.5 - GL 4 - GL 6+

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using electrical appliances, safety precautions to reduce the risk of fire, electric shock or injury to persons should be followed, including:

1. **READ ALL INSTRUCTIONS BEFORE USING THIS WATER HEATER.**
2. This water heater must be grounded.
3. Install or locate this water heater only in accordance with the provided installation instructions.
4. Use this water heater only for its intended use as described in this manual.
5. Contact a qualified electrician to have unit properly installed.
6. As with any appliance, close supervision is necessary when used by children.
7. Do not operate this water heater if it is not working properly or if it has been damaged or dropped.
8. This water heater should be serviced only by qualified service personnel. Contact a service facility for examination, repair or adjustment.
9. Failure to service the anode rod at least once a year could cause the tank to fail and leak.

KEEP THESE INSTRUCTIONS AT HAND
SAVE THESE INSTRUCTIONS

Technical data

MODEL		GL 2.5	GL 4	GL 6+
Capacity	gallons	2.5	4	6
Voltage	Vac	110/120 for each model		
Power at 120 Vac	Watts	1500	1500	1500
Maximum Water pressure	psi	150	150	150
Weight	Lbs	15.5	17.3	29.5
Amperage	Amps	12.50 for each model		
Phases		1	1	1

WARNING

The installer should review the contents of this manual with the owner upon completion of installation, and the manual should be left with the owner and placed in a location close to the installation.

FIG. 1/1

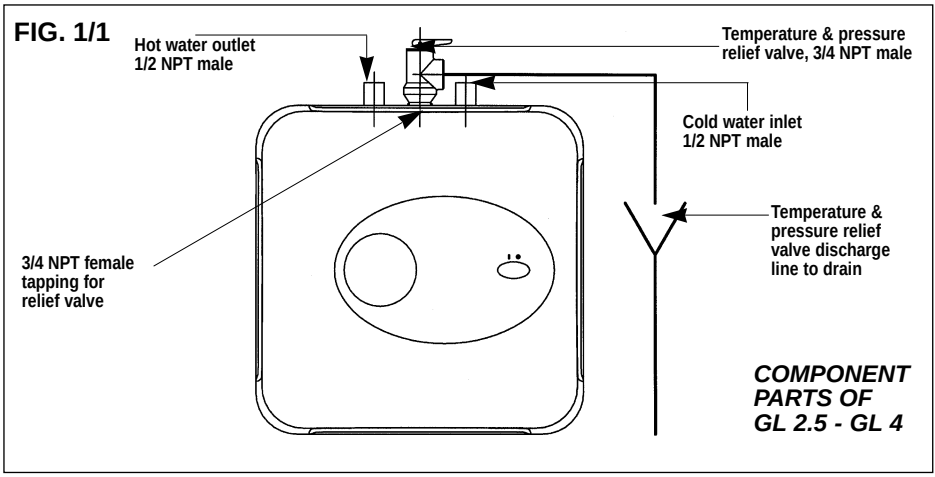

COMPONENT PARTS OF GL 2.5 - GL 4

FIG. 1/2

COMPONENT PARTS OF GL 6+ (Horizontal installation)

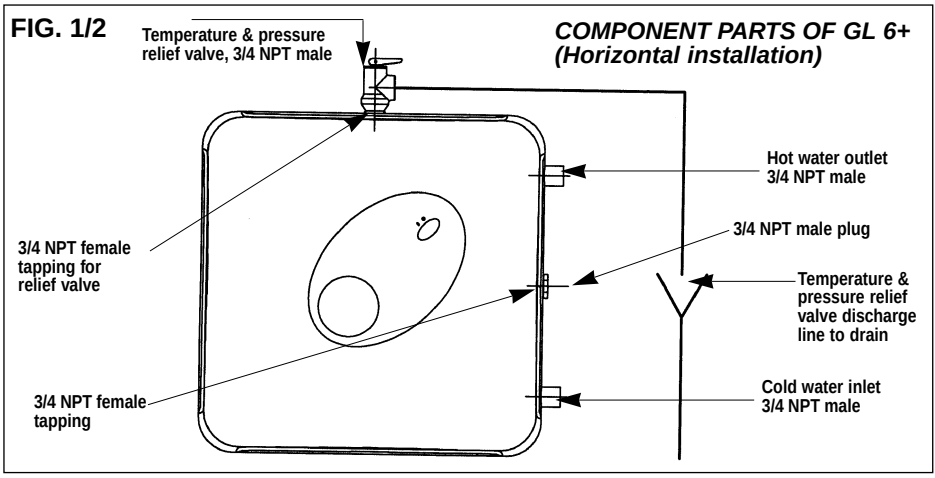

FIG. 1/3

COMPONENT PARTS OF GL 6+ (Vertical installation)

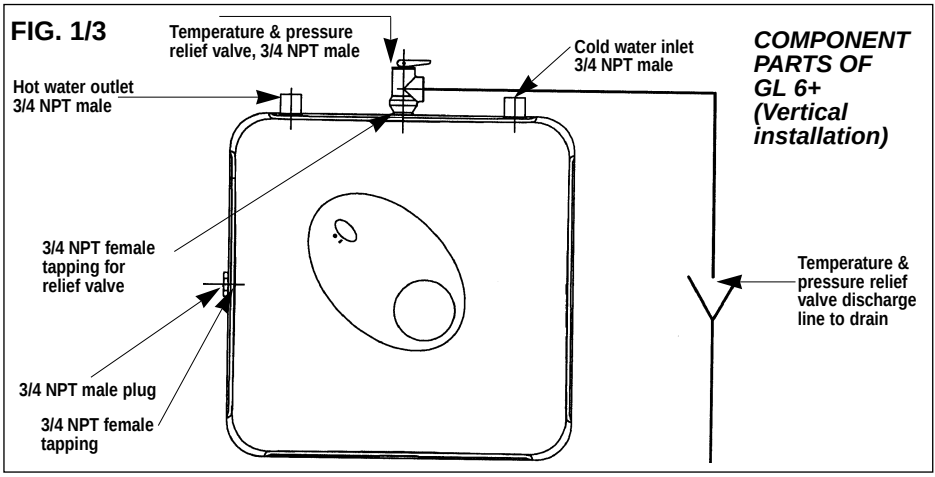

Preview Limit Reached! To view more of this manual, please visit:
http://freemanualdownload.com/Ariston-GL-4-free-manual-download